

Marka	Aparat	Obudowa/peleryna	Wymagane dodatkowe akcesoria
Canon	EOS 1D Mark III	C-AF - peleryna	
Canon	EOS 1Ds Mark III	C-AF - peleryna	
Canon	EOS 40D	C-AF - peleryna	
Canon	EOS 450D	C-AF - peleryna	
Canon	EOS 50D	C-AF - peleryna	
Canon	EOS 5D	C-AF - peleryna	
Canon	PowerShot G11	C-AF - peleryna	
Canon	PowerShot G10	C-AF - peleryna	
Canon	PowerShot S1 IS	C-AF - peleryna	
Canon	PowerShot S5 IS	C-AF - peleryna	
Nikon	Coolpix P5000	C-AF - peleryna	
Nikon	Coolpix P5100	C-AF - peleryna	
Nikon	Coolpix P6000	C-AF - peleryna	
Nikon	D200	C-AF - peleryna	
Nikon	D3S	C-AF - peleryna	
Nikon	D3	C-AF - peleryna	
Nikon	D300	C-AF - peleryna	
Nikon	D40	C-AF - peleryna	
Nikon	D40x	C-AF - peleryna	
Nikon	D50	C-AF - peleryna	
Nikon	D60	C-AF - peleryna	
Nikon	D70	C-AF - peleryna	
Nikon	D700	C-AF - peleryna	
Nikon	D70s	C-AF - peleryna	
Nikon	D80	C-AF - peleryna	
Olympus	E-3	C-AF - peleryna	
Olympus	E-410	C-AF - peleryna	
Olympus	E-420	C-AF - peleryna	
Olympus	E-510	C-AF - peleryna	
Olympus	E-520	C-AF - peleryna	
Olympus	MJU 840	C-AF - peleryna	
Olympus	SP-560 UZ	C-AF - peleryna	
Olympus	SP-565	C-AF - peleryna	
Sony	DSC-D770	C-AF - peleryna	C-A62
Sony	DSC-H1	C-AF - peleryna	C-A58
Sony	DSC-H2	C-AF - peleryna	C-A58
Sony	DSC-H3	C-AF - peleryna	C-A58
Sony	DSC-H5	C-AF - peleryna	C-A58
Sony	DSLR-A100	C-AF - peleryna	
Sony	DSLR-A200	C-AF - peleryna	
Sony	DSLR-A300	C-AF - peleryna	
Sony	DSLR-A350	C-AF - peleryna	
Sony	DSLR-A700	C-AF - peleryna	