

Marka	Aparat	Obudowa/peleryna	Wymagane dodatkowe akcesoria
Canon	PowerShot G11	D-A	C-A58
Canon	PowerShot G10	D-A	C-A58
Canon	PowerShot S1 IS	D-A	C-A58
Canon	PowerShot S5 IS	D-A	C-A58
Nikon	Coolpix P5000	D-A	
Nikon	Coolpix P5100	D-A	
Nikon	Coolpix P6000	D-A	
Nikon	Coolpix P80	D-A	
Olympus	SP-560 UZ	D-A	C-A55
Olympus	SP-565	D-A	
Olympus	SP-570 UZ	D-A	C-A55
Olympus	SP-590 UZ	D-A	
Sony	DSC-F505	D-A	
Sony	DSC-F707	D-A	
Sony	DSC-F717	D-A	
Sony	DSC-F828	D-A	
Sony	DSC-H1	D-A	C-A58
Sony	DSC-H10	D-A	
Sony	DSC-H2	D-A	C-A58
Sony	DSC-H3	D-A	C-A58
Sony	DSC-H5	D-A	C-A58
Sony	DSC-H50	D-A	
Sony	DSC-H7	D-A	
Sony	DSC-H9	D-A	
Sony	DSC-S70	D-A	
Sony	DSC-S75	D-A	
Sony	DSC-S85	D-A	
Sony	MVC-CD 1000	D-A	
Sony	MVC-CD 200	D-A	
Sony	MVC-CD 300	D-A	
Sony	MVC-CD 400	D-A	
Sony	MVC-CD 500	D-A	
Panasonic	DMC-GF1C	D-A	
Panasonic	DMC-GF1K	D-A	