

Producent	Model	Obudowa / Peleryna	Dodatkowe Akcesoria
Sony	DSC-780	D-MM	
Sony	DSC-D770	C-AF - peleryna	C-A62
Sony	DSC-D770	C-AF100 -peleryna	
Sony	DSC-D770	C-AFX - peleryna na aparat i flash	C-A62
Sony	DSC-D770	C-AFX100 - peleryna na aparat i flash	
Sony	DSC-D770	U-AXP	C-A62
Sony	DSC-F505	D-A	
Sony	DSC-F707	D-A	
Sony	DSC-F717	D-A	
Sony	DSC-F828	D-A	
Sony	DSC-H1	C-AF - peleryna	C-A58
Sony	DSC-H1	C-AFX - peleryna na aparat i flash	C-A58
Sony	DSC-H1	D-A	C-A58
Sony	DSC-H1	D-AX	C-A58
Sony	DSC-H10	D-A	
Sony	DSC-H2	C-AF - peleryna	C-A58
Sony	DSC-H2	C-AFX - peleryna na aparat i flash	C-A58
Sony	DSC-H2	D-A	C-A58
Sony	DSC-H2	D-AX	C-A58
Sony	DSC-H3	C-AF - peleryna	C-A58
Sony	DSC-H3	D-A	C-A58
Sony	DSC-H5	C-AF - peleryna	C-A58
Sony	DSC-H5	C-AFX - peleryna na aparat i flash	C-A58
Sony	DSC-H5	D-A	C-A58
Sony	DSC-H5	D-AX	C-A58
Sony	DSC-H50	D-A	
Sony	DSC-H7	D-A	
Sony	DSC-H9	D-A	
Sony	DSC-L1	D-CP1	
Sony	DSC-N1	D-LI2	
Sony	DSC-N2	D-LI2	
Sony	DSC-P1	D-CP1	
Sony	DSC-P10	D-CP2	
Sony	DSC-P100	D-CP1	
Sony	DSC-P12	D-CP2	
Sony	DSC-P120	D-CP1	
Sony	DSC-P150	D-CP2	
Sony	DSC-P2	D-CP1	
Sony	DSC-P200	D-CP2	
Sony	DSC-P31	D-CP1	
Sony	DSC-P43	D-MM	
Sony	DSC-P5	D-CP1	
Sony	DSC-P50	D-CP1	
Sony	DSC-P51	D-CP1	
Sony	DSC-P52	D-CP1	
Sony	DSC-P7	D-CP1	
Sony	DSC-P71	D-CP1	
Sony	DSC-P72	D-CP2	
Sony	DSC-P73	D-CP2	
Sony	DSC-P8	D-CP2	
Sony	DSC-P9	D-CP1	
Sony	DSC-P92	D-CP2	
Sony	DSC-P93	D-CP2	
Sony	DSC-S40	D-CP1	
Sony	DSC-S500	D-SW	
Sony	DSC-S60	D-MM	

Sony	DSC-S650	D-CP1	
Sony	DSC-S70	D-A	
Sony	DSC-S70	D-AX	
Sony	DSC-S70	D-CG1	
Sony	DSC-S730	D-MM	
Sony	DSC-S75	D-A	
Sony	DSC-S75	D-AX	
Sony	DSC-S75	D-CG1	
Sony	DSC-S750	D-CP2	
Sony	DSC-S80	D-MM	
Sony	DSC-S800	D-CP2	
Sony	DSC-S85	D-A	
Sony	DSC-S85	D-AX	
Sony	DSC-S85	D-CG1	
Sony	DSC-S90	D-MM	
Sony	DSC-V1	D-SC	
Sony	DSC-V3	D-CG3	
Sony	DSC-W1	D-SW	
Sony	DSC-W100	D-LI2	
Sony	DSC-W110	D-LI2	
Sony	DSC-W12	D-SW	
Sony	DSC-W120	D-LI2	
Sony	DSC-W130	D-LI2	
Sony	DSC-W150	D-LI2	
Sony	DSC-W170	D-LI2	
Sony	DSC-W200	D-LI2	
Sony	DSC-W30	D-SW	
Sony	DSC-W300	D-SW	
Sony	DSC-W35	D-SW	
Sony	DSC-W5	D-SW	
Sony	DSC-W50	D-LI2	
Sony	DSC-W55	D-LI2	
Sony	DSC-W7	D-SW	
Sony	DSC-W70	D-LI2	
Sony	DSC-W80	D-LI2	
Sony	DSC-W90	D-LI2	
Sony	DSLR-A100	C35 - peleryna	
Sony	DSLR-A100	C500 - peleryna	
Sony	DSLR-A100	C-AF - peleryna	
Sony	DSLR-A100	C-AF100 -peleryna	
Sony	DSLR-A100	C-AFX - peleryna na aparat i flash	
Sony	DSLR-A100	C-AFX100 - peleryna na aparat i flash	
Sony	DSLR-A100	C-Z100- peleryna	
Sony	DSLR-A100	U-A	
Sony	DSLR-A100	U-AX	
Sony	DSLR-A100	U-AXP	
Sony	DSLR-A100	U-AXP100	
Sony	DSLR-A100	U-AZ	
Sony	DSLR-A200	C35 - peleryna	
Sony	DSLR-A200	C500 - peleryna	
Sony	DSLR-A200	C-AF - peleryna	
Sony	DSLR-A200	C-AF100 -peleryna	
Sony	DSLR-A200	C-AFX - peleryna na aparat i flash	
Sony	DSLR-A200	C-AFX100 - peleryna na aparat i flash	
Sony	DSLR-A200	C-Z100- peleryna na aparat z dużym obiektywem	
Sony	DSLR-A200	U-A	
Sony	DSLR-A200	U-AX	
Sony	DSLR-A200	U-AXP	

Sony	DSLR-A200	U-AXP100	
Sony	DSLR-A200	U-AZ	
Sony	DSLR-A230	U-B	
Sony	DSLR-A300	C35 - peleryna	
Sony	DSLR-A300	C500 - peleryna	
Sony	DSLR-A300	C-AF - peleryna	
Sony	DSLR-A300	C-AF100 -peleryna	
Sony	DSLR-A300	C-AFX - peleryna na aparat i flash	
Sony	DSLR-A300	C-AFX100 - peleryna na aparat i flash	
Sony	DSLR-A300	C-Z100- peleryna na aparat z dużym obiektywem	
Sony	DSLR-A300	U-A	
Sony	DSLR-A300	U-AX	
Sony	DSLR-A300	U-AXP	
Sony	DSLR-A300	U-AXP100	
Sony	DSLR-A300	U-AZ	
Sony	DSLR-A350	C35 - peleryna	
Sony	DSLR-A350	C500 - peleryna	
Sony	DSLR-A350	C-AF - peleryna	
Sony	DSLR-A350	C-AF100 -peleryna	
Sony	DSLR-A350	C-AFX - peleryna na aparat i flash	
Sony	DSLR-A350	C-AFX100 - peleryna na aparat i flash	
Sony	DSLR-A350	C-Z100- peleryna na aparat z dużym obiektywem	
Sony	DSLR-A350	U-A	
Sony	DSLR-A350	U-AX	
Sony	DSLR-A350	U-AXP	
Sony	DSLR-A350	U-AXP100	
Sony	DSLR-A350	U-AZ	
Sony	DSLR-A380	U-B100	
Sony	DSLR-A450	U-BZ	
Sony	DSLR-A500	U-B	
Sony	DSLR-A550	U-B100	
Sony	DSLR-A700	C35 - peleryna	
Sony	DSLR-A700	C500 - peleryna	
Sony	DSLR-A700	C-AF - peleryna	
Sony	DSLR-A700	C-AF100 -peleryna	
Sony	DSLR-A700	C-AFX - peleryna na aparat i flash	
Sony	DSLR-A700	C-AFX100 - peleryna na aparat i flash	
Sony	DSLR-A700	C-Z100- peleryna na aparat z dużym obiektywem	
Sony	DSLR-A700	U-B	
Sony	DSLR-A700	U-BXP	
Sony	DSLR-A700	U-BXP100	
Sony	DSLR-A700	U-BZ	
Sony	DSLR-A850	U-BZ100	
Sony	DSLR-A900	C500 - peleryna	
Sony	DSLR-A900	C-Z100- peleryna na aparat z dużym obiektywem	
Sony	DSLR-A900	U-B	
Sony	DSLR-A900	U-BXP	
Sony	DSLR-A900	U-BXP100	
Sony	DSLR-A900	U-BZ	
Sony	DSLR-A900	U-BZ100	
Sony	MVC-CD 1000	D-A	
Sony	MVC-CD 1000	D-AX	
Sony	MVC-CD 200	D-A	
Sony	MVC-CD 200	D-AX	
Sony	MVC-CD 300	D-A	
Sony	MVC-CD 300	D-AX	

Sony	MVC-CD 400	D-A	
Sony	MVC-CD 400	D-AX	
Sony	MVC-CD 500	D-A	
Sony	MVC-CD 500	D-AX	

